



## Rotatable module instruction

### A. Positioning

Rotate the bezel to desired direction until "clip" sound for positioning.

### B. Re-direction

Press the clip on bezel to release bezel and change the direction.