



Rotatable module instruction

A. Positioning

Rotate the bezel to desired direction until "clip" sound for positioning.

B. Re-direction

Press the clip on bezel to release bezel and change the direction.